


# Everbrite LCD OrderRite™ Order Confirmation System

## Version 4.0 Monolith Electronics Insert Replacement Procedures 4/11/2003


- Step 1. Make sure power is turned off to the unit. The Illuminated switch should be turned off and not illuminated.
- Step 2. Remove the 11 fasteners holding the back on to the unit. Retain screws for replacing back when finished

**Note: Before replacing back when finished, make sure there are no tools, extra parts or packing are lying on fans or in cabinet.**

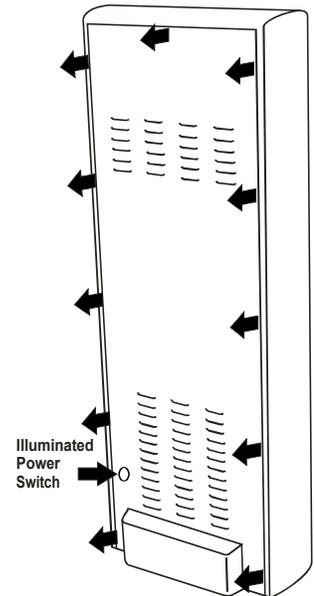


- Step 3 Tilt the internal enclosure down. Internal enclosure is supported by 2 pressurized gas shocks to hold the enclosure in place and reduce the weight.


**Note: when lifting internal enclosure back into place, hold unit from being forced forward too fast.**

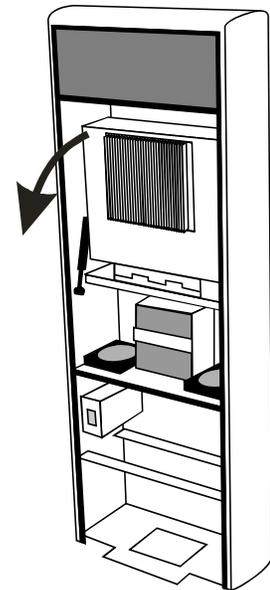

- Step 4 Release the 4 stainless steel face retainers

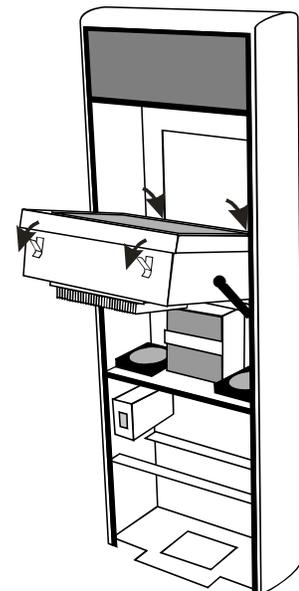

Step 5 Using caution not to twist the frame, lift off the face using the aluminum frame (may be tight) and leaving the ground strap in place, flip over the face so the holes in the frame can hang on the stainless steel face retainers.

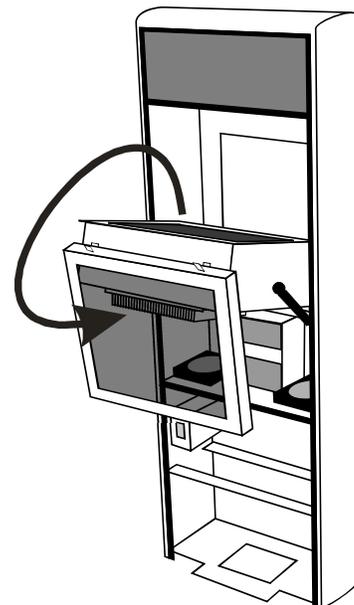

Step 6 Lift out the electronics insert and remove the old compact flash. Insert the new compact flash into the slot on the computer.

Step 7 Remove and retain the 2 white desiccant pouches

Step 9 Slide electronics insert into tracks

Step 11 **Important - Remove new desiccants from protective pouch and insert one on each side of new electronics insert.**

Step 12 Work backwards from step 5 until completed

Step 13 Boot up unit to test new electronics are working and displaying orders

Step 14 Repack old Compact Flash and old desiccant pouches into shipping box for return to Everbrite.

Any Questions contact Everbrite Tech Support toll free at 1-888-877-3092

