


ALL AMERICAN SCOREBOARDS™

MP-7499 Delay of Game Timer with MP5299 Control Console

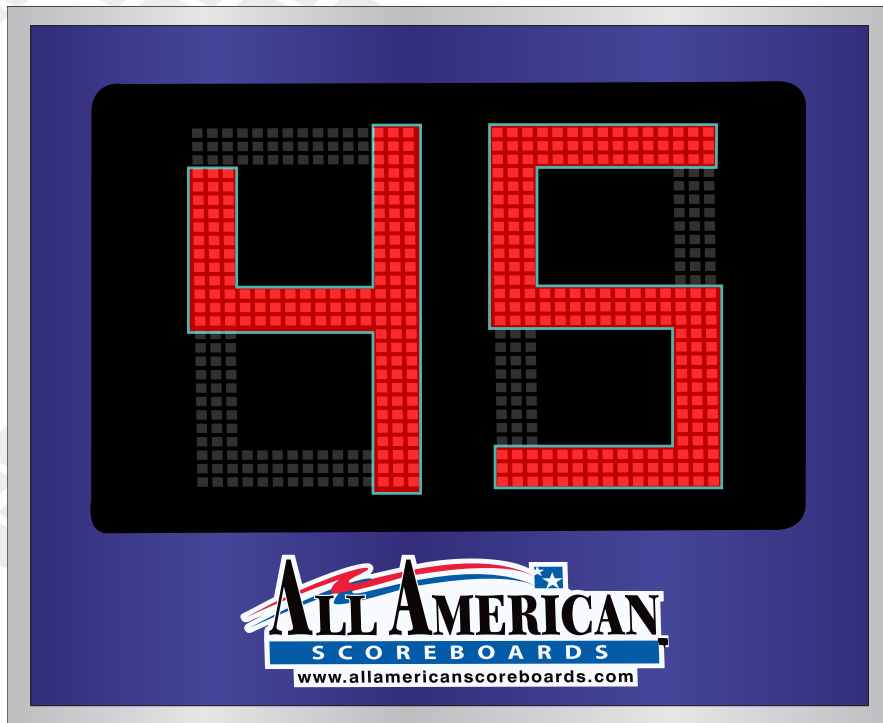

Everbrite

Operator's Manual

Rev. 08/06/07
Volume VII

Table of Contents

Table of Contents.....	2
1.0 Keypad Console.....	3
2.0 Console Keypad Functions.....	3
2.1 Initializing the System at Start-up.	3
2.2 DIM Operations.....	3
2.3 Timer Operations	4
3.0 Maintenance/ Troubleshooting.....	5
3.1 Table I: Quick Reference Problem/Cause.....	5
4.0 Safety.....	6
5.0 Warranty.....	7
6.0 Technical Support.....	8
6.1 Customer Service	8
6.3 Contact Information.....	8

Manual Overview

This manual is intended for the use of the All American Scoreboard owners and users. Read this manual carefully before starting the equipment.

This manual contains important information for operation and maintenance of the equipment. It also contains important instructions to prevent accidents, personal injury and/or serious damage prior to or during operation of the equipment.

Familiarize yourself thoroughly with the function and operation of this equipment and strictly observe the directions given. If you have any questions or need further details on specific aspects related to the AAS system, please do not hesitate to contact us.

In this manual you will find three levels of flagged notes or warnings.



WARNING! THE WARNING MESSAGE IS USED WHEN A LIFE THREATENING SITUATION MAY ARISE OR PERSONAL INJURY CAN RESULT.



CAUTION! The caution message is used when there is a danger of damage to the equipment, materials, or other important information; such as Warranty issues.

NOTE: The Note message is used to give operational information and useful tips.

1.0 Keypad Console

The Keypad Console has a touch sensitive keypad that allows the operator to enter all pertinent information. It then sends the information to the Controller Assembly within the sign by way of radio signal or hard-wire. A LCD screen displays the information that is being sent to the Timer. The Keypad you have will depend on the model of Scoreboard and interface system you have. If a Keypad Slipsheet needs to be replaced, printable slipsheets can be downloaded from www.allamericanscoreboards.com.



CAUTION: To protect the control from damage, it is advisable to disconnect the control and store in a dry secure area when not in use.







Figure 2

2.0 Console Keypad Functions

Turn On the Keypad console press  once to turn on and again to turn off.

When the Console Keypad is turned on, the LCD screen should become active.



2.1 Initializing the System at every Start-up.

To configure your console to function with the 7499 Game Timer, locate the CODE on the Keypad console (upper right corner in Figure 2); the code 67 is used for illustration. Press  then   then . This step is required each time the console is turned on.







2.2 Dimming Operation



The LED intensity can be adjusted by pressing . Multiple presses of the "DIM" button will cycle through the different brightnesses.

2.3 Timer Operation

The MP-7499 has two timers that can be set for up to 99 seconds. These timers will always display the same time. Use  or  to set the two different timers according the following example.

Example: Set TIMER 1 to 45 seconds

1. Time must be set to OUT by pressing . If timer is set to IN (timer is counting), TIMER 2 cannot be set until TIMER 1 counts down to 0.
2. Press .
3. Press   then press .
4. Repeat steps for TIMER 2 using the  button.







To start the timer, press . To stop the timer, press  again.


To reset a timer, press  or . The respective timer will reset to original set time.

The MP-7499 counts down by default. To change the timer to count up, stop the timer and press .

If a time other than the original time is needed, follow the following example.

Example: Timer is stopped at 23 seconds, but needs to be reset to 24 seconds.

1. Switch the TIME to OUT by pressing .
2. Press  then   then press .
3. Switch the TIME to IN by pressing  when time is resumed.

If the game time remaining is less than the delay of game time, press  and the TIMER LEDs on the MP-7499 will turn off. NOTE: The timer on on the LCD screen of the console will continue to count down.

3.0 Maintenance & Troubleshooting

For cleaning, use a window type product with a soft cotton cloth.



CAUTION: Do not use a power washer, solvent product or abrasive materials for cleaning board faces.

For cleaning the console, use a damp cloth periodically.

3.1 Table I: Quick Reference Problem/Cause



WARNING! USE A LOCK OUT/TAG OUT ON CIRCUIT BREAKERS OR "POWER ON/OFF" SWITCHES WHEN PERFORMING INSTALLATION, REPAIRS OR MAINTENANCE.

Follow the troubleshooting guides whenever possible prior to contacting customer service. If the problem you are seeing is not covered in the guide, please contact the customer service department as soon as possible. Refer to the diagrams included in section 6 for assistance in troubleshooting.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Scoreboard doesn't light and Console doesn't work	No power to the Scoreboard	Check that the main circuit breaker is on.
		Check to make sure the controller and scoreboard are plugged into an outlet.
Scoreboard Digits don't light (Console Works)	No power out of the controller assembly to the board	Check to make sure the scoreboard is plugged into an outlet.
		Check to make sure a circuit breaker did not get blown.
Digits light, Console works, but, no control of the Scoreboard	No data signal established	Turn off the Scoreboard and the Console and turn the Scoreboard on then the Console. Retry coding Console.
	Low battery (Wireless Consoles)	Be sure the battery is charged (if so equipped), or try the wall transformer to power the Console.
	No RF signal established (Wireless Consoles)	Take Console 10 to 25 feet from the Scoreboard and test again. Check antenna connections and tighten if necessary, both in the Scoreboard and in the Console. CAUTION: the antenna connection at the radio can be easily broken. Push or pull the connector STRAIGHT on or off!



WARNING! OPERATION OF THE UNIT WITH THE ELECTRICAL EXPOSED IS DANGEROUS. BE SURE ALL TOOLS AND ANY OTHER MATERIALS ARE REMOVED FROM THE UNIT, AND ALL ACCESS COVERS ARE REPLACED AND CLOSED BEFORE POWER IS TURNED ON.

NOTE: For Advanced Trouble Shooting, Service Manuals and Replacement Part Information go to www.allamericanscoreboards.com.

4.0 Safety Information

The owner of the All American Scoreboard is responsible for safe operation and repair. He therefore is obliged to familiarize operating personnel with the contents of this manual and make them aware of all possible hazards.

NOTE: When using this equipment, always follow the manufacturer's instructions for safe operation. In case of emergency, please telephone Technical Support or a qualified service technician.

Do not operate the sign until it is completely assembled and installed per the instructions supplied by AAS.

AAS recommends that your main power be installed by a licensed electrician in accordance with the local building and electrical codes.

All equipment must be grounded in accordance with the local building and electrical codes. AAS recommends Earth Link Ground.

If any part of the Scoreboard equipment is malfunctioning or has been damaged, cease operation and consult with AAS Technical Support or qualified service technician before further use.

Use only AAS specified or recommended replacements parts.



WARNING! USE A LOCK OUT/TAG OUT ON CIRCUIT BREAKERS OR "POWER ON/OFF" SWITCHES WHEN PERFORMING INSTALLATION, REPAIRS OR MAINTENANCE.

When performing repairs be mindful of the weather and work area conditions. Avoid the unit's exposure to the elements, water and debris, or anything that may be dangerous or cause damage to the equipment.



WARNING! OPERATION OF THE UNIT WITH THE ELECTRICAL CIRCUITRY EXPOSED IS DANGEROUS. BE SURE ALL TOOLS AND ANY OTHER MATERIALS ARE REMOVED FROM THE UNIT, AND ALL ACCESS COVERS ARE REPLACED AND CLOSED BEFORE POWER IS TURNED ON.



CAUTION: Use of solvent cleaners or a power washer on your Scoreboard may cause permanent damage.

5.0 Warranty

Five Year Limited Warranty

Non-compliance with procedures of Installation, Safety, Operation and/or Maintenance practices defined in this manual may result in a Warranty issue.

This warranty extends to and is enforceable by only the original consumer purchaser and only for the period (during the applicable term) which the product remains in the possession of the original consumer purchaser. "Original consumer purchaser" means the person who first purchased the product covered by this warranty other than for purpose of resale. This warranty does not apply if it is found that at *any time* the equipment has not been used for its intended purpose.

NOTE: Please ask your dealer, distributor or sales representative for details.



CAUTION! Any unauthorized changes or modifications to this unit without our prior written approval will void the user's warranty and will transfer health and safety obligations to the user



CAUTION! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a class "A" Digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with Owner's Manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area can cause harmful interference in which case the user will be required to correct the interference at their expense.

© Copyright All American Scoreboards 2006

This is the exclusive property of All American Scoreboards® a division of Everbrite® LLC. Use of or duplication of this document in any manner without the expressed written consent of All American Scoreboards® is prohibited.

The information contained in this document is subject to change without notice and should not be construed as a commitment by All American Scoreboards®.

All American Scoreboards® assumes no responsibility for any errors that may appear in this document. Nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

All American Scoreboards® shall not be liable for incidental or consequential damages in connection with, or arising out of the furnishing, performance, or use of this document and the program material, which it describes.

Trademarks Credits

All American Scoreboards® is a registered trademark of Everbrite® LLC.

Everbrite® is a registered trademark of AAS LLC.

6.0 Technical Support

6.1 Customer Service

Customer satisfaction is the top priority at AAS. Our skilled, experienced Account Management teams are dedicated to providing highly responsive service through all phases of our client's programs.

These teams are computer-linked to each of our manufacturing facilities to provide "on-line" updates on the status of customer orders. Furthermore, AAS's EDI capabilities allow electronic interchange to efficiently process customer orders.

6.2 Contact Information

All American Scoreboards
401 S. Main Street
P.O. Box 100
Pardeeville, WI 53954
PHONE: 1 800-356-8146
FAX: 1 608-429 -9216
www.allamericanscoreboards.com